

OPERATING AND INSTALLATION INSTRUCTIONS



1 INSTALLATION

This appliance is Class II and splash-proof. It should be connected to a fixed post, in horizontal position, according to current regulations. Respect the minimum distances in relation to the floor, walls, net curtains, etc. as given hereafter (Fig. 1, 2).

Front of the heater should not be within one meter from any easily flammable object (0.50 meter for other sides of the heater).


Switch or any other control should not be reach from the shower or bath.

In wet rooms, electric network must be fitted with a 30 mA max. residual differential circuit-breaker. Heater should not be installed under a wall connection box.

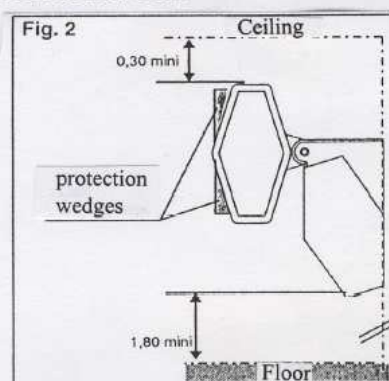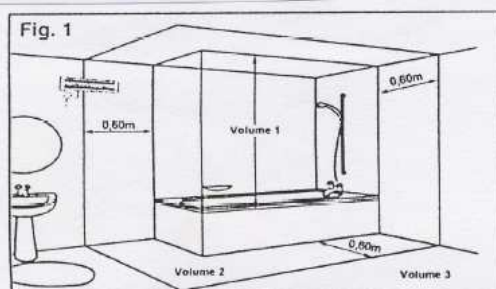

2 CONTROL BOX

It can be placed, either on the left or the right side of the unit. Operate as shown on Fig. 3.

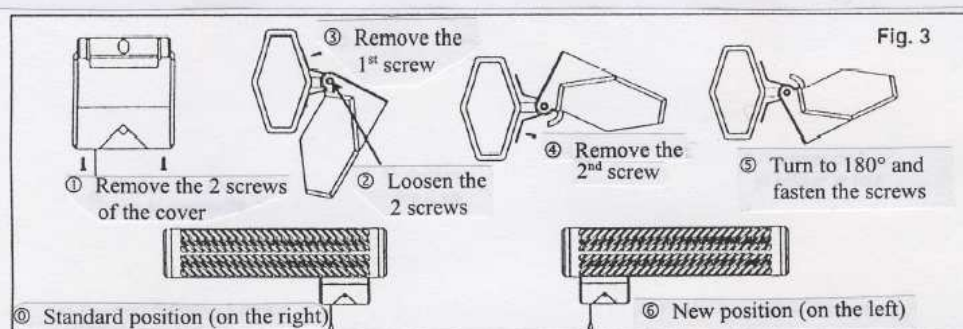

NB : control box should always be under the unit, either on the right or on the left side of the unit.